



13mm Cinco (Spanish for 5)

1. To making folding easier, crease all the dashed lines with a ball point pin and a straight edge.
2. Cut out the Motor Mount on the solid lines, fold all of the dashed lines
3. Fold and glue Tab 1A to Tab 1B with the printed sides together.
4. Fold Tabs 1A&B over to 1C and glue.
- 5 Repeat steps 3 & 4 for Tab 2 through 5.
6. Form the Motor Mount into a 5 sided, hollow tube and glue together using Tab 6.
- 7, Cut out the main body of the Cinco on the solid lines, fold on the dashed lines.
Form the Top into a five sided "cone" and glue.
8. Form the Bottom into a five sided "cone" with the edges folded up and glue.
9. Spread glue on the tab between the Top and the Bottom and press it flat.
10. Spread glue on the 4 remaining tabs of the Bottom and press them against the the Top.
11. Slide the Motor Mount up through the Bottom and continue until it reaches the Top and just a little (1/32") above it.
12. Put a fillet of glue around the Motor Mount where it joins the Top and Bottom.

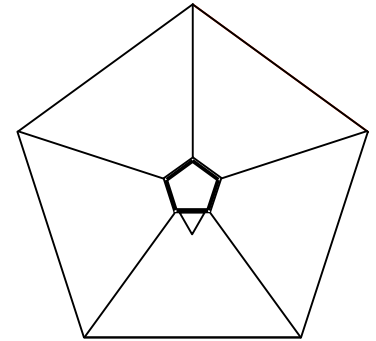

Top View

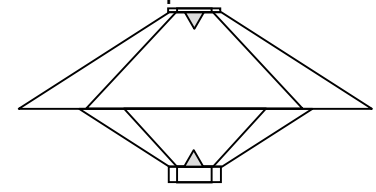

Side View

Recommended motors: 1/4 A3-3T, 1/2A3-2T,A3-4T, A10-3T, A10-PT

Art Applewhite Rockets © 2005
www.artapplewhite.com

